


INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION

RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

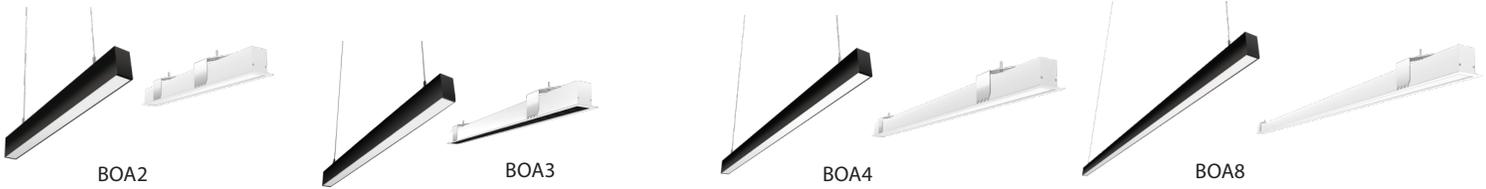

IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

Risk of fire. Risk of shock. Suitable for damp location.

Min 90° Supply Conductors. Indoor use only.

WALL MOUNT

Ceiling/Wall Mount Kit sold separately, CAT# BOA-SM.

1. Use appropriate hardware for installing the fixture.
2. Secure **Wall Mount Brackets** to the wall as shown in Fig. 1 using appropriate hardware.
3. Recommended **Wall Mounting Bracket** spacing is listed below, Fig. 5.
4. Remove **End Cap** and drill a 1/2" size hole on side of fixture for the **Power Cord** (Fig. 2) to align with the junction box (Fig. 3). Use provided **Cord Strain Relief** to protect **Power Cord**.
5. Feed the **Power Cord** (provided) through the installer drilled hole. Insert the wires into the respective **Quick Connector** captive terminal matching colors of existing installed wires as shown in Fig. 2.
6. Connect wires as shown in wiring diagram (Fig. 47). Use appropriate UL approved wire connectors as required by code to complete wiring. Be careful not to pinch wires. **WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.**
7. See Fig. 3 if using a **Single Gang Box Cover Plate** with a **Grommet** to protect the **Power Cord**.
8. Attach the fixture to the **Wall Mount Brackets** with provided hardware (Fig. 4).

Fig: 2

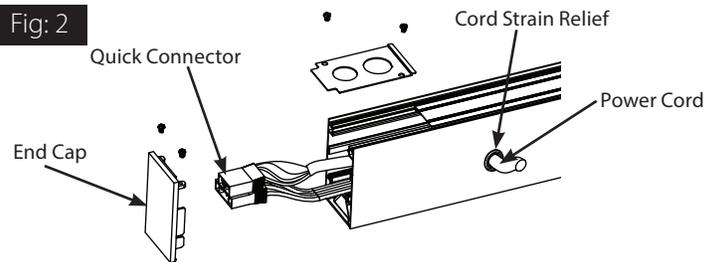


Fig: 3

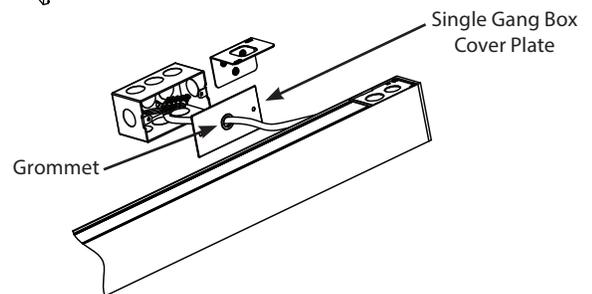


Fig: 4

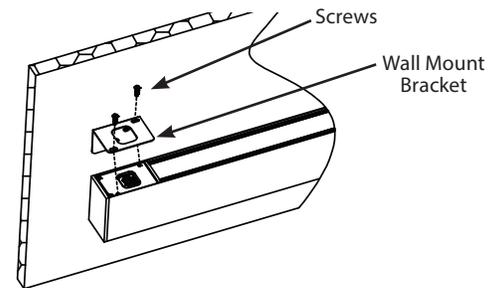


Fig: 5

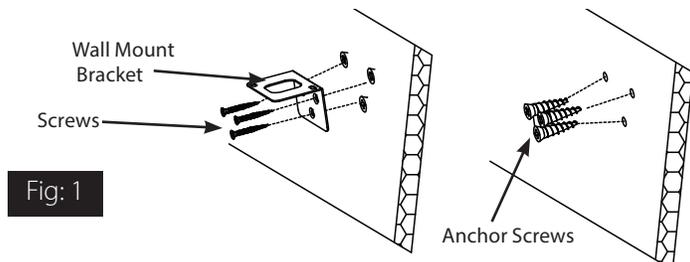
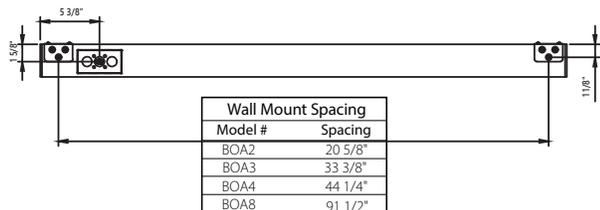


Fig: 1

INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION

RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

CEILING / SURFACE MOUNT

Ceiling/Wall Mount Kit sold separately, CAT# BOA-SM.

1. Use appropriate hardware for installing the fixture.
2. Remove **End Cap** and **Cover Plate** as shown in Fig. 6. Knockout the smaller **Cable Entry** hole in the **Cover Plate** and install **Grommet** (provided). Re-install **Cover Plate** on fixture.
3. Feed the **Power Cord** (provided) through the **Cover Plate** and **Grommet**. Insert the wires into the respective **Quick Connector** terminal matching colors of existing installed wires (Fig. 7). Re-install **End Cap**.
4. Mark the mounting surface for mounting hardware location. For recommend ceiling/surface mount spacing see as shown in Fig. 8.
5. Drill two 1/2" holes on your surface for the **Toggle Bolts**. Install the **Toggle Bolts** and attach the **Mounting Posts** by threading into **Toggle Bolt** hardware, Fig 9 and 10.
6. Knockout 2 **Ceiling Mounting Holes** located on top of fixture, Fig. 11.
7. Remove fixture lens, tools are provided, see Fig 12.
8. Connect wires as shown in wiring diagram (Fig. 47). Use appropriate UL approved wire connectors as required by code to complete wiring. Optional decorative cover plate is provided (Fig. 13). **WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.**
9. Align the fixture knockout holes to **Mounting Posts** and install using 2 **Phillips Screws** (provided) as shown in Fig. 13.
10. Re-install fixture lens to complete installation.

Fig: 8

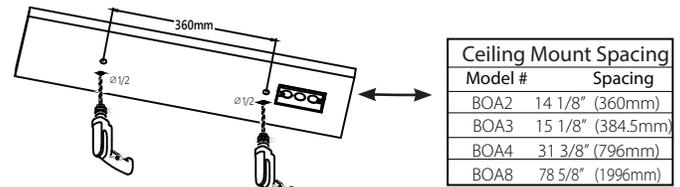


Fig: 9

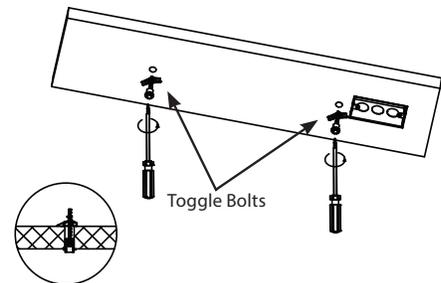


Fig: 10

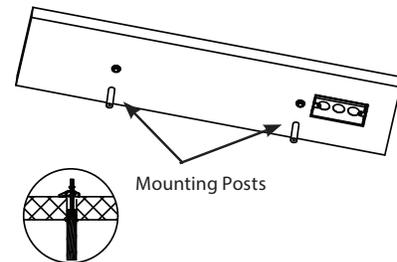


Fig: 6

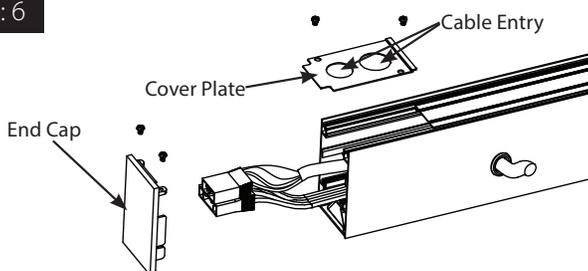


Fig: 7

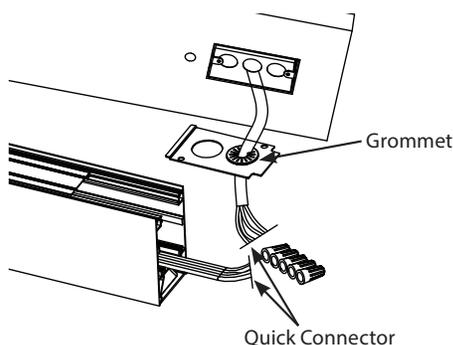


Fig: 11

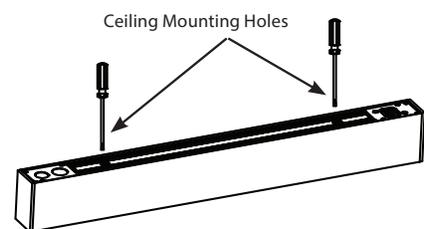


Fig: 12


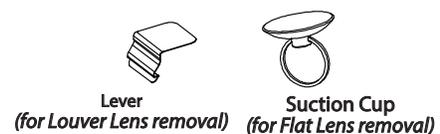


Fig: 13



INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION

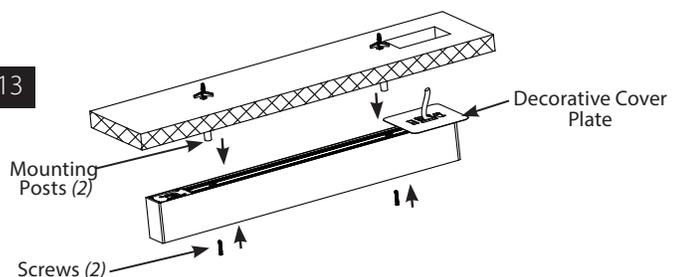

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

RECESSED MOUNT

Note: Select Power (W) and/or Color Temperature (CCT) before installing the fixture, see Fig. 41).

1. Use appropriate hardware for installing the fixture.
2. Prepare the surface by pre-cutting an opening in the mounting surface. See Fig. 14 for recommended cut-out dimensions.
3. Remove **End Cap** and gently remove Lens. **Lens Removal Tools** are provided, see Fig 12.
4. Rotate **LED Gear Tray** retainer screws 90° (**DO NOT TOUCH THE LEDs**) as shown in Fig. 15. Tether Cable will prevent the **LED Gear Tray** from falling.
5. Use the larger **Knockout** on the top of the housing for **Power Feed** as shown in fig. 16.
6. Identify the fixture end with female **Connector** to make the power connection (Fig. 17) then connect wires as shown in wiring diagram (Fig. 47). Use appropriate UL approved wire connectors as required by code to complete wiring. Be careful not to pinch wires. **WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.**
7. Replace the **End Cap**. Adjust **Recessed Support Brackets** for proper height to clear the surface material thickness (Fig. 18).
8. Position the fixture into the surface cut-out and turn the **Phillips Screws** to rotate the **Recess Support Brackets** to clamp on the surface material.
9. Re-install the **LED Gear Tray**. Use caution to avoid pinching wires or cables. (**DO NOT TOUCH THE LEDs**). Replace Lens.

Fig: 15

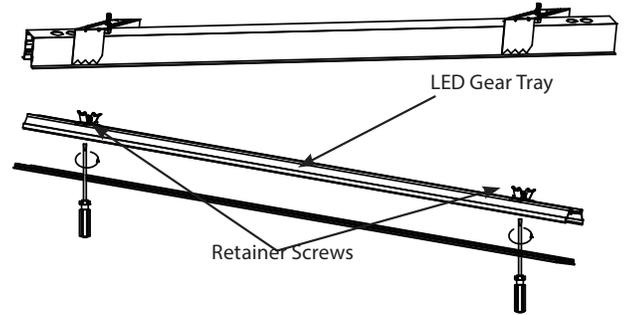


Fig: 16

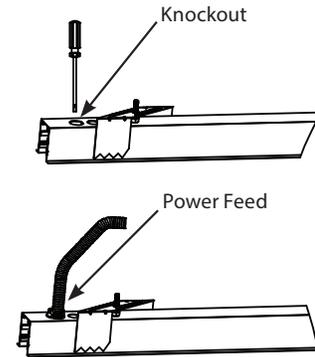


Fig: 17

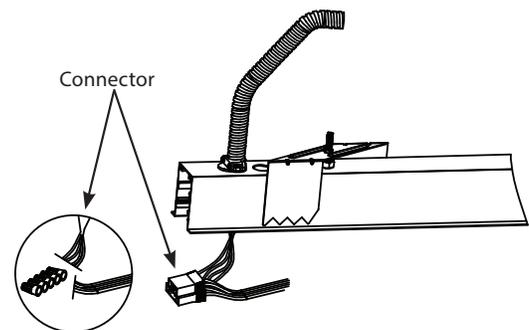


Fig: 18


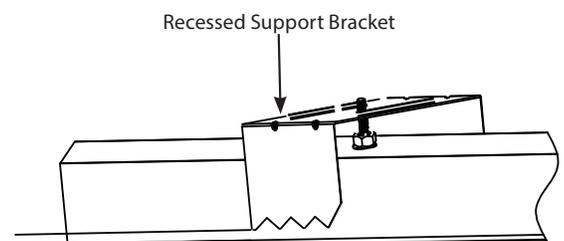


Fig: 14

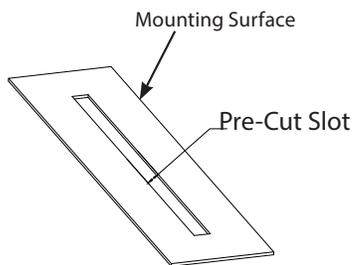

Recessed Cut-Out Dimensions:		
Model	Regular type	With Sensor type
BOA 2ft	24 1/8" (612mm)	25 1/4" (642mm)
BOA 3ft	36 11/16" (932mm)	37 7/8" (962mm)
BOA 4ft	47 11/16" (1212mm)	48 7/8" (1242mm)
BOA 8ft	94 15/16" (2412mm)	96 1/8" (2442mm)
Note: Width's Cut-out size is 2 1/4" (57mm)		

INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION

RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

RECESSED MOUNT MULTIPLE CONNECTIONS (CONTINUOUS RUN)

Note: Select Power (W) and/or Color Temperature (CCT) before installing the fixture, see Fig. 44, 45, 46).

Catalog #	Maximum Number of Linked Fixtures
BOA2	Up to 30 fixtures (do not exceed 600W)
BOA3	Up to 20 fixtures (do not exceed 600W)
BOA4	Up to 15 fixtures (do not exceed 600W)
BOA8	Up to 7 fixtures (do not exceed 600W)

1. Use appropriate hardware for installing the fixture.
2. Prepare the surface by pre-cutting an opening in the mounting surface. See Fig. 14 for recommended cut-out dimensions.
3. Remove **End Cap** and gently remove **Lens**. **Lens Removal Tools** are provided, see Fig. 12.
4. Rotate **LED Gear Tray Retainer Screws** 90° (**DO NOT TOUCH THE LEDs**) as shown in Fig. 15. Tether Cable will prevent the **LED Gear Tray** from falling.
5. Use the larger **Knockout** on the top of the housing for **Power Feed** as shown in Fig. 16.
6. Identify the fixture end with female connectors to make the power connection (Fig. 17) then connect wires as shown in wiring diagram (Fig. 47). Use appropriate UL approved wire connectors as required by code to complete wiring. Be careful not to pinch wires. **WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.**
7. Adjust **Recessed Support Brackets** for proper height to clear the surface material thickness (Fig. 18).
8. Position the fixture into the surface cut-out and turn the **Phillips Screws** to rotate the **Recess Support Brackets** to clamp on the surface material.
9. Open the next fixture per instructions above and install the **Splice Bracket/Buckle** (provided) to connect two fixtures together, see Fig. 19 and 20.
10. Adjust **Recessed Support Brackets** for proper height to clear the surface material thickness for additional fixture(s), Fig.18.
11. Position the next fixture into the surface cut-out and turn the **Phillips Screws** to rotate the **Recess Support Brackets** to clamp on the surface material.
12. Secure by closing the **Splice Bracket/Buckle** between fixtures.
13. Make power connection between fixtures by connecting **Male/Female Power Connectors** (Fig. 21).
14. Re-install the **LED Gear Trays**. Use caution to avoid pinching wires or cables. (**DO NOT TOUCH THE LEDs**)
15. Replace the **Lens** on the fixtures.

Fig: 19

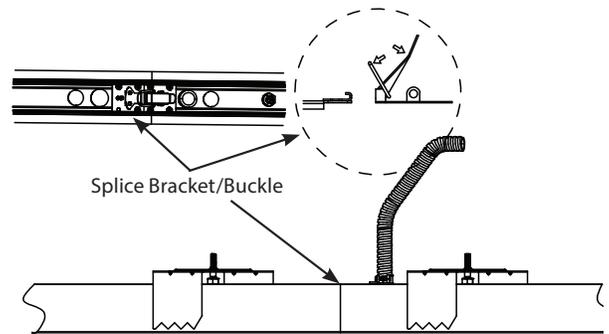


Fig: 20


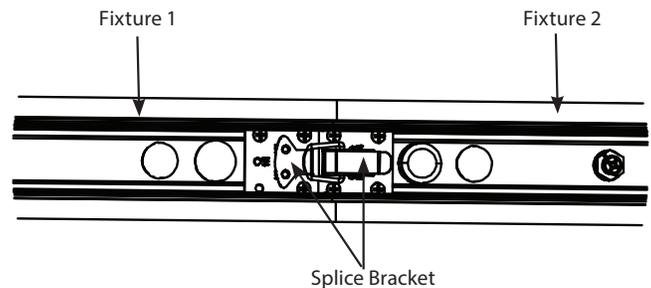


Fig: 21



INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION

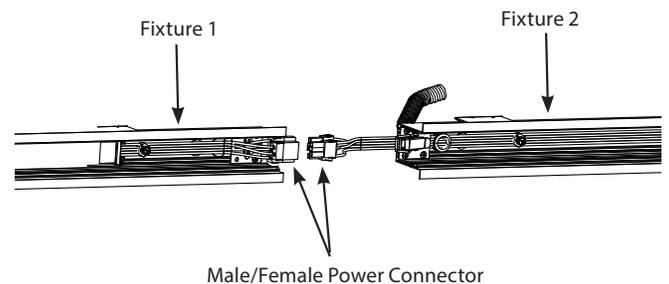

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

PENDANT MOUNT

1. Use appropriate hardware (*provided*) for installing the fixture.
2. Install **Canopy Mounting Hardware** (*Fig. 22*) for the power supply. Secure the **Cross Brace** to junction box (*Fig. 23*).
3. Pass the **Power Cord** through the ceiling **Canopy** and secure with **Cord Strain Relief** as shown in *Fig. 24*.
4. Identify the fixture end with female connectors to make the power connection (*Fig. 17*) then connect wires as shown in wiring diagram (*Fig. 47*). Use appropriate UL approved wire connectors as required by code to complete wiring. Be careful not to pinch wires. **WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.**
5. Place the **Canopy** on the mounting surface. Push **Cable Coupler** on the threaded **Cross Brace Stud** and tighten to secure the **Canopy** (*Fig. 25*).
6. For non-power side use recommended spacing to attach the support **Cross Brace**, **Canopy** and **Cable**, **Toggle Bolts** provided (*Fig. 26, 27, 28*).
7. Connect the **Pendant Support Brackets** to the threaded **Cable Locking Device**. Cable length can be adjusted by pressing down on the **Cable Locking Device**, see *Fig. 29*.
8. Install **Pendant Mounting Brackets** near both ends of the fixture by pressing into the slots on top of fixture. Secure **Pendant Mounting Brackets** by tightening **Positioning Screws** (*provided*) as shown in *Fig. 30*.
9. Remove **End Cap** and **Cover Plate** as shown in *Fig. 31*. Knockout the smaller cable entry hole in the **Cover Plate** and install **Grommet** (*provided*).
10. Feed the **Power Cord** (*provided*) through the **Grommet**. Insert the wires into the respective **Quick Connect** terminal matching colors of existing installed wires (*Fig. 32 and 33*).
11. Re-install **Cover Plate** and **End Cap**.
12. Fix the **Power Cord** to the **Support Cable** with **Wire Ties** (*provided*) see *Fig. 34*.

Fig: 22

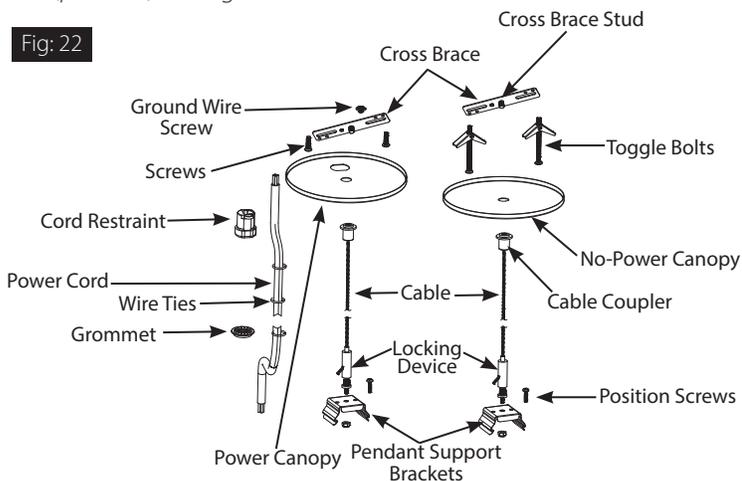


Fig: 23

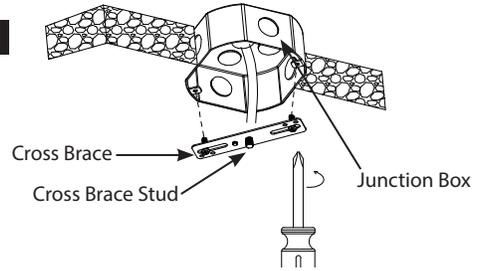


Fig: 24

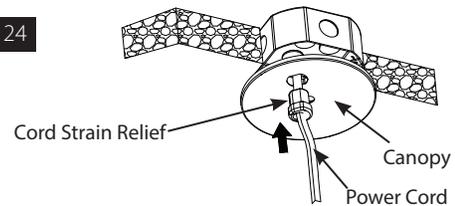


Fig: 25

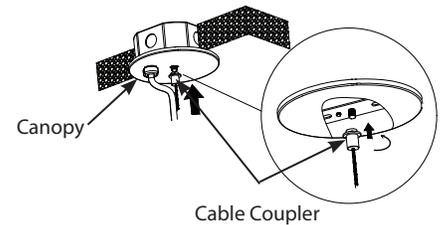


Fig: 26

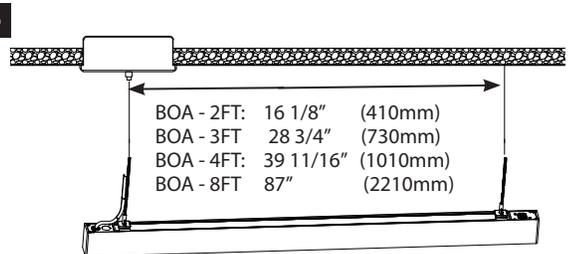


Fig: 27


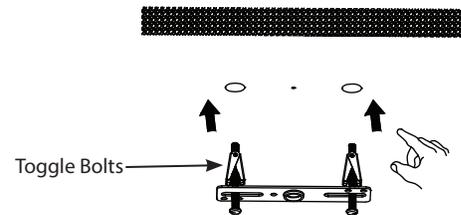


Fig: 28



INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION

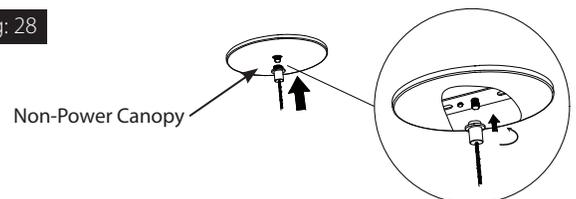

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

Fig: 29

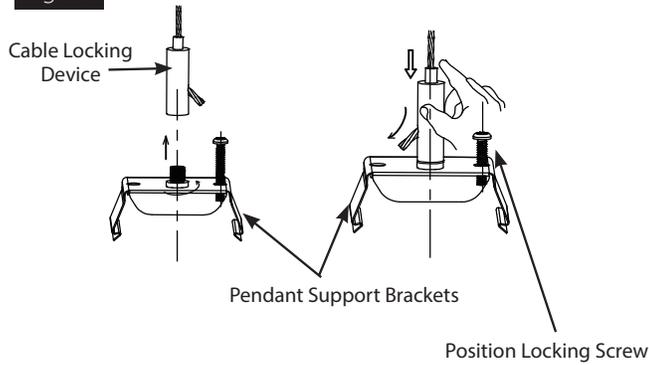


Fig: 32

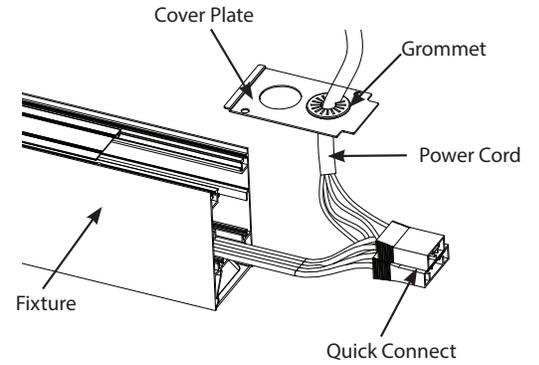


Fig: 30

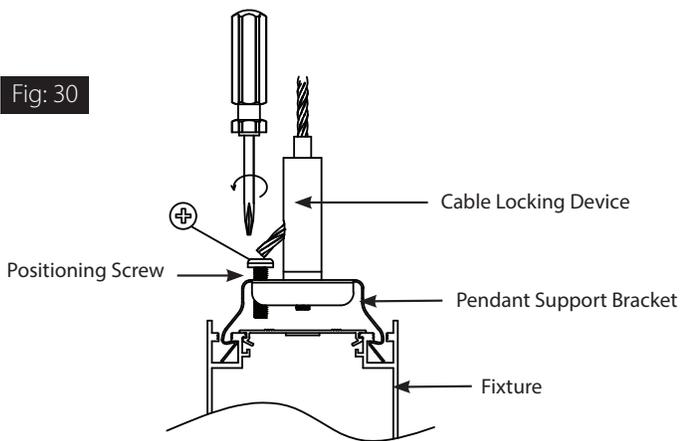


Fig: 33

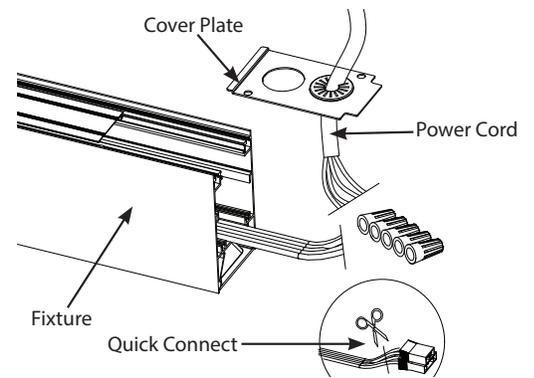


Fig: 31


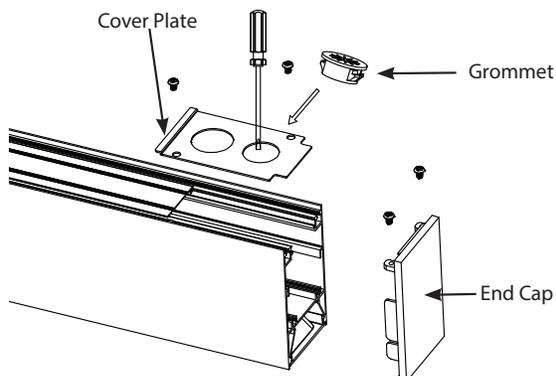


Fig: 34

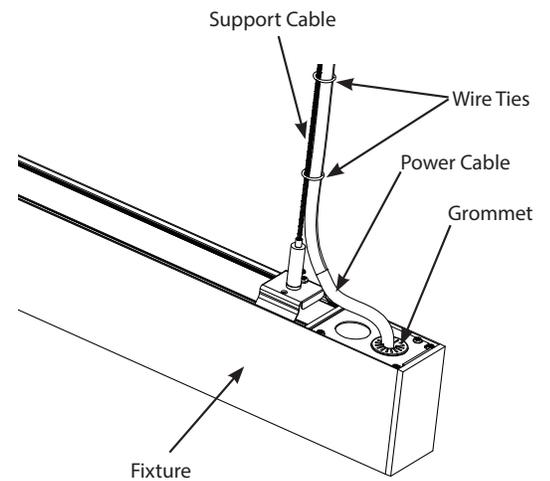

INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION

RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

PENDANT MOUNT MULTIPLE CONNECTIONS (CONTINUOUS RUN)

Catalog #	Maximum Number of Linked Fixtures
BOA2	Up to 30 fixtures (do not exceed 600W)
BOA3	Up to 20 fixtures (do not exceed 600W)
BOA4	Up to 15 fixtures (do not exceed 600W)
BOA8	Up to 7 fixtures (do not exceed 600W)

1. Use appropriate hardware (*provided*) for installing the fixture.
2. Install **Canopy Mounting Hardware** (Fig. 22) for the power supply. Secure the **Cross Brace** to junction box (Fig. 23).
3. Pass the **Power Cord** through the ceiling **Canopy** and secure with **Cord Strain Relief** as shown in Fig. 24.
4. Connect wires as shown in wiring diagram (Fig. 47) in the junction box. Use appropriate UL approved wire connectors as required by code to complete wiring. **WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.**
5. Place the **Canopy** on the mounting surface. Push **Cable Coupler** on the threaded **Cross Brace Stud** and tighten to secure the **Canopy** (Fig. 25).
6. For non-power side use recommended spacing to attach the support **Cross Brace, Canopy** and **Cable** (Fig. 26).
7. Connect the **Pendant Support Brackets** to the threaded **Locking Device**. Cable length can be adjusted by pressing down on the **Cable Locking Device**, see Fig 26.
8. Install **Splice Bracket/Buckle** (2 parts) to Fixture 1 and Fixture 2 as shown in Fig. 35 and lock fixtures in place.
9. Connect **Male/Female Plugs** together (Fig. 36).
10. Install **Pendant Support Brackets** near both ends of each fixture by pressing into the slots on top of fixture. Secure **Pendant Support Brackets** by tightening **Position Screws** (*provided*) as shown in Fig. 30.
11. Feed the **Power Cord** (*provided*) through the **Cover Plate** and **Grommet**. Insert the wires into the respective **Quick Connector** matching colors of existing installed wires (Fig. 37).
12. Replace Field-Adjustable **Switch Plate** and **Cover Plate** as shown in Fig. 38. Change fixture Power and/or Color Temperature (**CCT**) settings to desired value.
13. Install **Pendant Support Brackets** near both ends of each fixture by pressing into the slots on top of fixtures. Secure **Pendant Support Brackets** by tightening **Position Screws** (*provided*) as shown in Fig. 29 and 30. **CAUTION: Raise combined fixtures with adequate support.**
14. Fix the **Power Cord** to the **Support Cable** with **Wire Ties** (*provided*) see Fig. 34.

Fig: 35

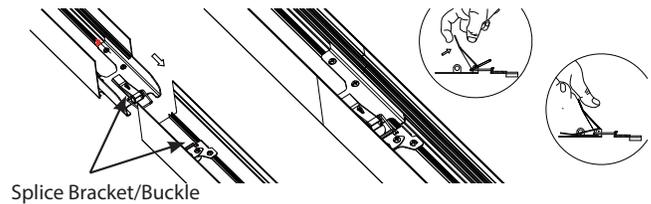


Fig: 36

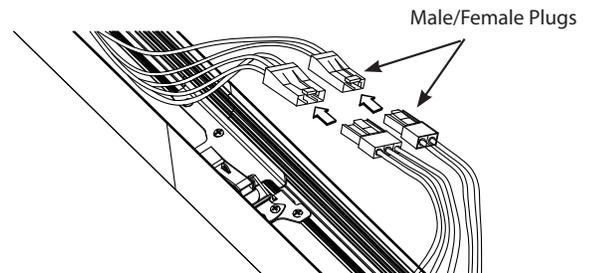


Fig: 37


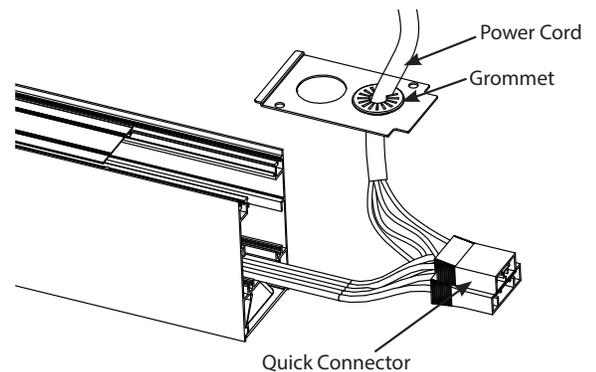


Fig: 38

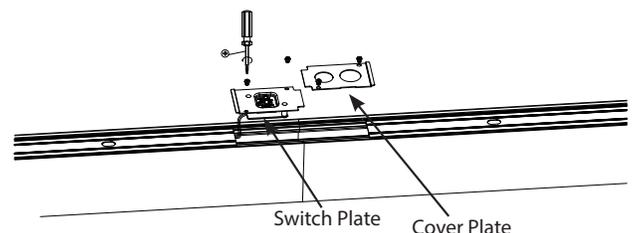

INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION

RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

T-GRID INSTALLATION

(USE PENDANT MOUNT MODELS FOR T-GRID APPLICATIONS, NOT COMPATIBLE WITH SENSOR EQUIPPED MODELS)

T-GRID Recessed Mount Kit, Model # BOA-TG is sold separately..

BOA-TG for use with Pendant Mount BOA ONLY.

Note: Grid Bars shown in below illustrations are to be provided and installed by others. N

1. LENS INSTALLATION:

Press the **Rolling Tape** (Fig. 39) flat lens (provided) into the assembled linear fixture, then install it according to the actual length and trim to the required size.

2. Assemble and adjust the **Mount Kit Brackets** according to the size of the **T-Grid** (Fig. 40). Adjust the **Screw** on the **Recessed Bracket** so that the **Bracket** fits the height of the **T-Grid** (Fig. 41).

3. Secure the **Mounting Bracket** onto the fixture then press down so that the **Mounting Clip** secures (snaps) to the Fixture (Fig. 41).

4. Tighten the positioning **Screw(s)** on the **Mounting Clip(s)** to prevent the **Clip(s)** from loosening (Fig. 42)

5. Place the fixture onto the **T-Grid**. Bend the **Adjustable Grid Clips** outward to sit across the **T-Grid Bar** (Fig. 43).

6. Connect wires as shown in wiring diagram (Fig. 47). Use appropriate UL approved wire connectors and/or conduit as required by code to complete wiring. Be careful not to pinch wires. **WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.**

Fig: 40

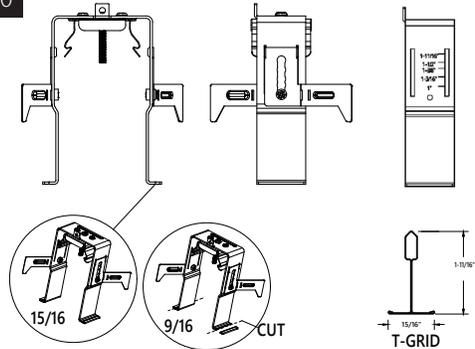


Fig: 41

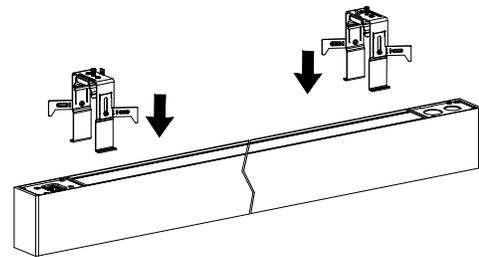


Fig: 42

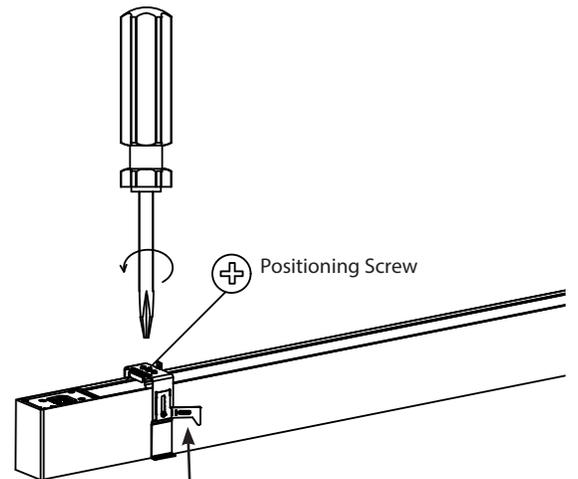


Fig: 43


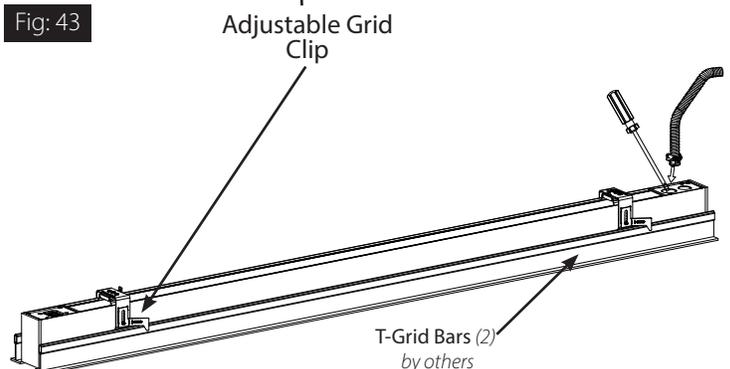


Fig: 39



INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION

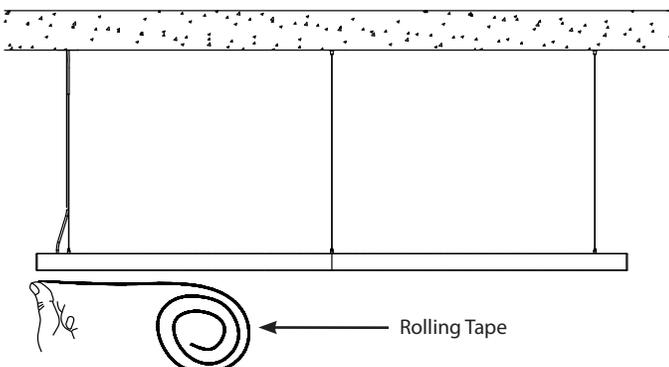

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

FIELD ADJUSTMENT

Follow instructions below to change the **Fixture Power** and/or **Color Temperature (CCT)** position from factory settings:

Factory Settings:




BOA2 - BOA3 - BOA4 - BOA8

Direct Light - 3500K, 100% Power

Indirect Light - 3500K, Up/Down 30% / 70% Power

Recessed Light - 3500K / 100% Power

1. Locate the **Power Switches** on housing as shown in Fig. 44, 45, 46.
2. Select **Power** and/or **Color Temperature (CCT)** by sliding the respective switch to the desired setting.

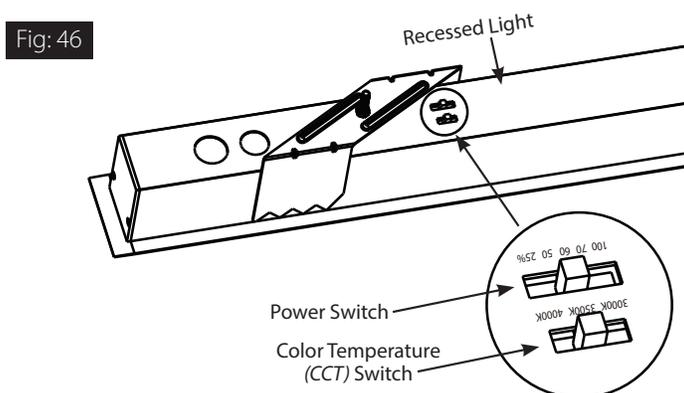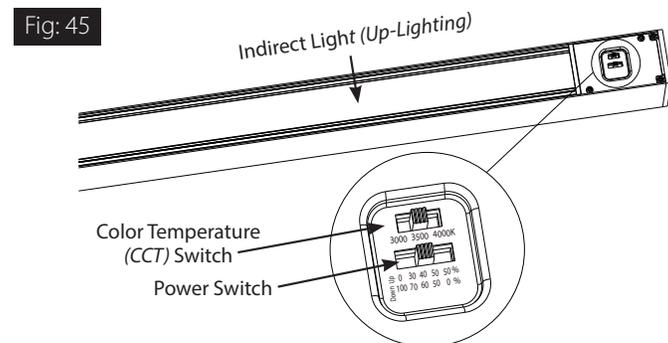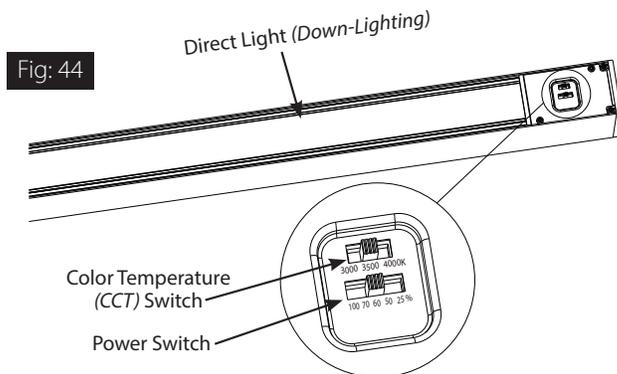


0-10V DIMMABLE WIRING

Universal voltage driver permits operation at 120V through 277V, 50 or 60 Hz. For 0-10V dimming follow the wiring directions as shown below (Fig. 47).

1. Connect the black fixture lead to the LINE supply lead.
2. Connect the white fixture lead to the COMMON supply lead.
3. Connect the GROUND wire from fixture to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
4. Connect the purple fixture lead to the (V+) DIM lead.
5. Connect the pink fixture lead to the (V-) DIM lead.
6. Cap the yellow fixture lead, if present. Do NOT connect.

Fig. 47

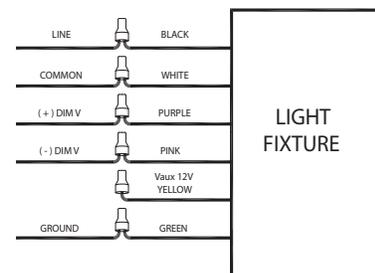

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

1. Clean lens with non-abrasive glass cleaning solution.
2. Do not open the fixture to clean the LED. Do not touch the LED.

TROUBLESHOOTING

1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
2. Is the fixture grounded properly?

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

PIR MODELS

See factory settings below (optional remote sold separately for custom settings, CAT# MSR1).

Factory Settings:

- Brightness: 100%
- Sensitivity: 100%
- Hold Time: 20 Minutew
- Stand-by dimming level: 20%
- Daylight: Disabled
- Stand-by time: 1 Minute

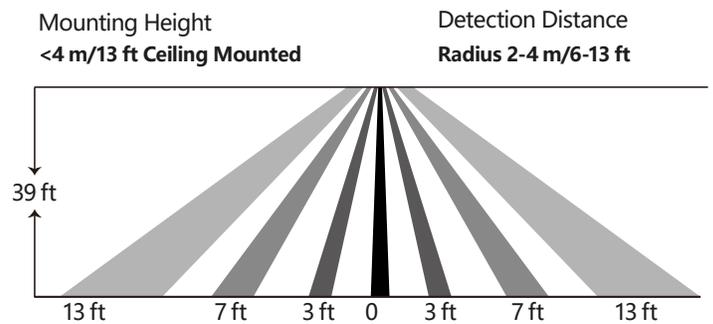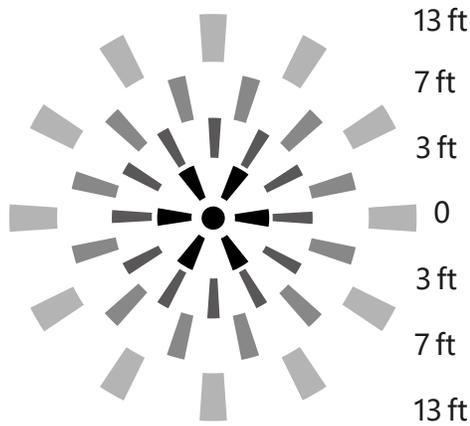

MVS MODELS

See factory settings below (optional remote sold separately for custom settings, CAT# MSR1).



Factory Settings:

- Brightness: 100%
- Sensitivity: 100%
- Hold Time: 20 Minutes
- Stand-by dimming level: 20%
- Daylight: Disabled
- Stand-by time: 1 Minute

Highest mounting height is 4 m/13 ft

This figure indicates the maximum distance at the highest mounting height with 100% sensitivity.

- Well Detected Area
- Possibly Detected Area

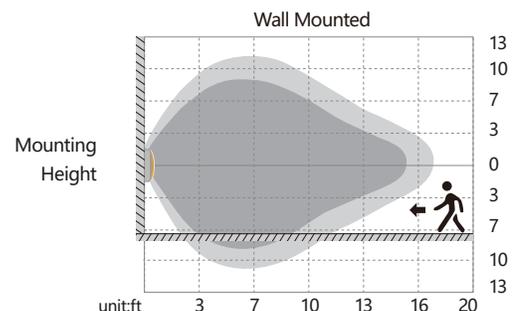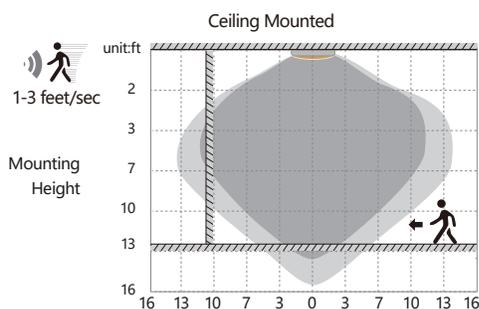

INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

LIGHTCLOUD® BLUE

Lightcloud Blue is a Bluetooth mesh wireless lighting control system that allows you to control various compatible devices. With RAB's patented Rapid Provisioning technology, devices can be quickly and easily commissioned for residential and large commercial applications using the Lightcloud Blue mobile app.

Each device in a system can communicate with any other device, eliminating the need for a Gateway or Hub and maximizing the control system's reach.

Lightcloud Blue devices should be placed within the specified range to communicate within the Bluetooth Mesh network. Up to 60 feet between standard building materials.

LIGHTCLOUD® BLUE SENSORS

Sensors are integrated at the factory and operate in Occupancy mode in their Uncommissioned State. Once paired to the Lightcloud Blue mobile app, the sensor will be disabled. Sensor Settings can be adjusted after being moved into an Area in the Lightcloud Blue mobile app. Once the sensor is enabled in the mobile app, the sensor will respond based on Commissioned State factory settings.

Factory Settings: Uncommissioned State


- Sensor Status: Enabled
- Motion Sensitivity: High
- Brightness when triggered: 100%
- Hold time: 20 Minutes
- Daylight harvesting: Disabled

Factory Settings: Commissioned State


- Sensor Status: Disabled.
- Motion Sensitivity: High
- Brightness when triggered: Last on status
- Hold time: 20 Minutes
- When vacant: Off
- Daylight harvesting: Disabled

SENSOR COVERAGE

PIR:

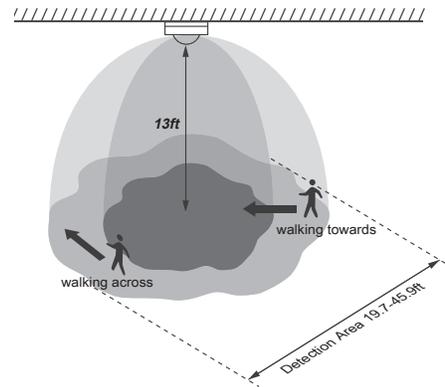

MVS:

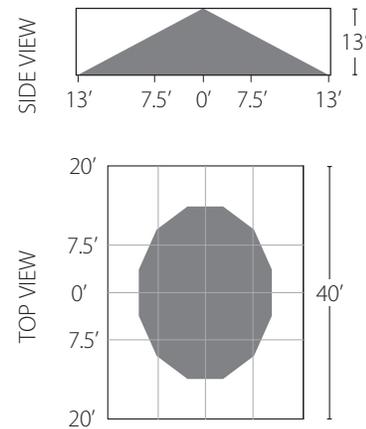

CONTROLLING LIGHTCLOUD® BLUE DEVICE

1. Confirm your device is powered on.
2. Download the Lightcloud Blue app from the Apple® App store or Google Play™ store.
3. Launch the App and create an account or login.
4. Tap the "add device" icon in the app to start connecting devices. 
5. Select the fixture in the app and move it to an Area with other Lightcloud Blue lights.
6. You're all set!



Learn more about the Lightcloud Blue system and app features.

INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

RESET TO FACTORY SETTINGS

If your Lightcloud Blue fixture is already paired, you can reset it to factory settings by using the below methods.

Method 1: Delete from App


Open the app and access the device settings for the paired device. Be sure that the downlight is online (green status bars are visible) and select "DELETE FROM SITE".

Method 2: Manual

Power the fixture off and on 5 times consecutively. Do not allow less than 5 seconds and more than 10 seconds to elapse from switch off to on, do not allow more than 2 seconds to elapse from switch on to off. The fixture will flash 3 times, then reset to 100% brightness at default CCT.

Method 3: Rapid Reset Tool

The rapid reset process must be done by professional electricians qualified by RAB. Reach out to your RAB sales manager to request a Rapid Reset Tool. The tool simply needs to be placed directly on fixture for 2 seconds as below shows. The fixture will flash 3 times, then reset to 100% brightness at default CCT.

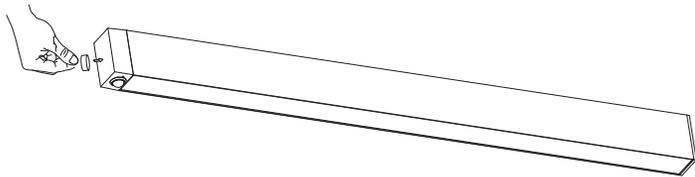

CONFIGURATION

To configure the Lightcloud Blue please login to the Lightcloud Blue app for details. For additional startup information, visit www.lightcloud.com/item/lcb-getting-started/

INSTRUCTIONS

FIELD-ADJUSTABLE BOA® INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

**** DON'T TOSS IT—RECYCLE IT! MAKE THE SUSTAINABLE CHOICE BY RECYCLING THIS FIXTURE AT END OF LIFE WITH A LICENSED RECYCLING PROVIDER. ****

BATTERY BACKUP MODELS

WIRING


CAUTION: FOR BATTERY BACKUP FIXTURE. Voltage can be present in **BATTERY**. To prevent high voltage from being present on output leads, Inverter connector must be open. Do not join **BATTERY** connector until installation is complete.

NOTE: Make sure that the necessary branch circuit wiring is available. An **UNSWITCHED AC** source of power is required. The emergency driver must be fed from the same branch circuit as the LED driver. Reference Fig. 48 for wiring diagram.

CAUTION: Do not use any supply voltage other than 120-277V, 50/60 Hz.

1. Connect **UNSWITCHED HOT** fixture lead to **HOT AC** supply line.
2. If using an **UNSWITCHED** circuit, connect **UNSWITCHED** and **SWITCHED** lines together.
3. If using a **SWITCHED** circuit, connect **SWITCHED HOT** lead to the switch.
4. For 0-10V dimming, connect **DIM (+)** purple and **DIM (-)** pink leads to 0-10V dimming connection.
5. All unused leads must be capped and insulated.
6. When power is on, the fixture should be on and the **CHARGING INDICATOR LIGHT** should illuminate to indicate the battery is charging.
7. Once the **BATTERY** has charged for at least one hour, a short duration test may be performed by pressing the **Test Button** as shown in Fig. 49.
8. After the battery has charged for 24 hours, a long duration test can be performed by disconnecting power to the fixture.

Fig: 48

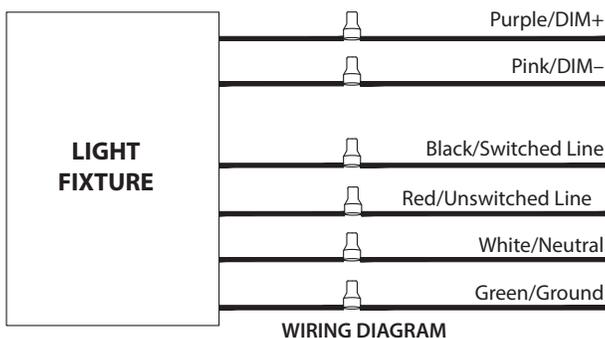

OPERATION

1. When AC power is applied the charging indicator light is illuminated indicating that the **BATTERY** is being charged.
2. When power fails the standby power automatically switches to emergency power (*internal battery*) operating at reduced illumination.
3. When AC power is restored the emergency driver automatically returns to charging mode.

MAINTENANCE


Although no routine maintenance is required to keep the emergency driver functional, it should be checked periodically to ensure that it is working. The following schedule is recommended:

1. Visually inspect the charging indicator light monthly. It should be illuminated
2. Test the emergency operation of the fixture at 30-day intervals for a minimum of 30 seconds.
3. Conduct a 90-minute discharge test once a year. Fixture would operate at reduced illumination for a minimum of 90 minutes.

TROUBLESHOOTING

1. Be sure the fixture is grounded properly.
2. If the charging indicator light does not illuminate after pressing and releasing the **Test Button** (Fig. 49), check power and check if battery is connected properly.

Fig: 49

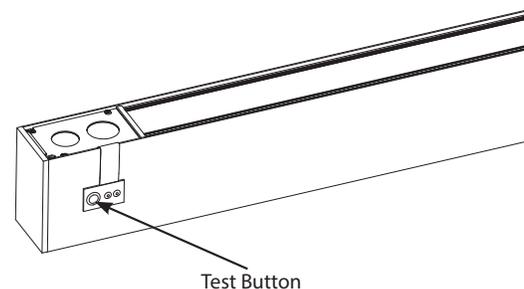

© 2026 RAB LIGHTING Inc.

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - tech@rablighting.com

Free Lighting Layouts
Answered online or by request

BOA - 0326
P-100614

RAB WARRANTY: RAB's warranty is subject to all terms and conditions found at rablighting.com/warranty.