

INSTRUCTIONS

HALED Modular Downlight



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

HA4



HA6



IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixture must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


TO PREVENT ELECTRICAL SHOCK, POWER SHOULD BE TURNED OFF AT THE FUSE BOX BEFORE INSTALLATION.

SAFETY WARNINGS:


Read all product labels and directions.

- **WARNING – Risk of fire or electric shock. Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.**
- **Installation should be performed only by a qualified electrician in accordance with the National Electrical Code and relevant local codes. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.**
- **WARNING – To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.**
- **INSTALLATION SHOULD ONLY BE PERFORMED AFTER POWER TO THE FIXTURE HAS BEEN DISCONNECTED.**
- **These instructions shall be included on an information sheet packaged with each unit.**
- **This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**

WHAT'S IN THE BOX

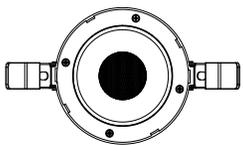

Fixture (1)

 


Driver box (1)




Template (1)

OPTIONAL ACCESSORIES

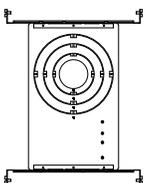


DLPLATE/WFR3468/NB
Mounting plate with nailer bar

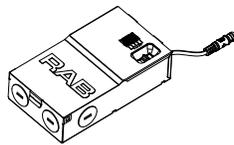

HAD4/D10
COMPATIBLE FOR 4" MODULE
HAD6/D10
COMPATIBLE FOR 6" MODULE

 DLPLATE/
WFR3456



EXTCBL-FA-6
Extension cable 6ft

 
EXTCBL-FA-12
Extension cable 12ft

EXTCBL-FA-20
Extension cable 20ft

REQUIRED ACCESSORIES

A trim must be purchased so that the fixture can be installed properly.


INTERCHANGEABLE TRIM FOR 4" MODULE (HA4)




HAT4RA
HAT4RB
HAT4RBN
HAT4RW



 HAT4RBW




HAT4SA
HAT4SB
HAT4SBN
HAT4SW

 


HAT4SBW


INTERCHANGEABLE TRIM FOR 6" MODULE (HA6)

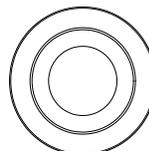


HAT6RA
HAT6RB
HAT6RBN
HAT6RW

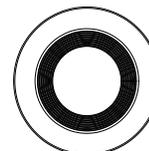

HAT6RBW

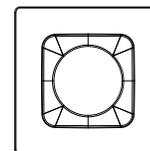

HAT6SA
HAT6SB
HAT6SBN
HAT6SW

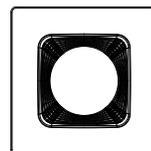

HAT6SBW

INSTRUCTIONS

HALED Modular Downlight


RAB®

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

INSTALLATION


1. Turn power OFF from the fixture before installation.
2. Use template inside box to cut hole in ceiling. (Fig.1)

Fig: 1

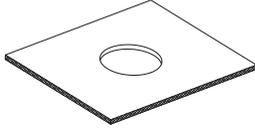


3. Disconnect the fixture from driver box. (Fig.2)

Fig: 2

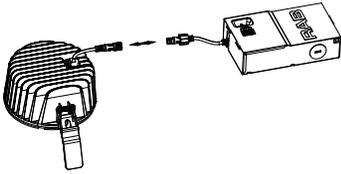


4. Mount the appropriate trim (Round or Square) on the module. Twist the trim to lock on the module securely. (Fig.3)

Fig: 3

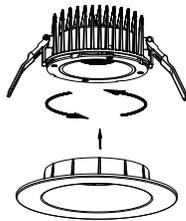


5. Open the driver box and remove the knockout(s). (Fig.4)

Fig: 4

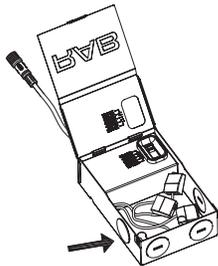

6. Insert the electrical supply cable through the knockout and secure with a terminal. Wire driver box (Fig.5), white-white, black - black, green - green/ground.


Fig: 5

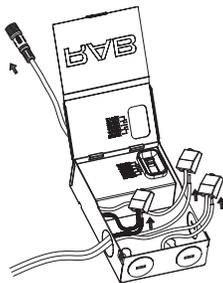

INSTALLATION (cont'd)


7. Place all wiring and connections back into the box, close the cover and select desired CCT. (Fig.6)

Fig: 6

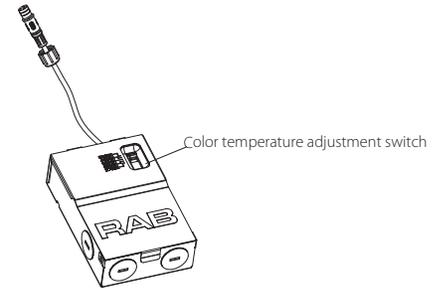


8. Place the driver box into the ceiling and connect the fixture to driver box. Lifting both retention tabs upward. (Fig.7)

Fig: 7

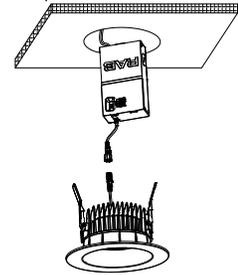

9. Push until the trim sits flush against the ceiling. (Fig.8)

Fig: 8

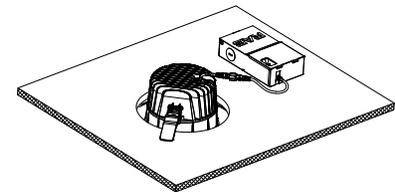

TROUBLESHOOTING

1. Check that the line voltage at the fixture is correct. Refer to wiring directions.
2. Is the fixture grounded properly?

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

1. Do not open fixture to clean the LED. Do not touch the LED.
2. Do not touch reflector.
3. Do not clean any fixture surface with wood-base cleaning material such as paper towels or tissues.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

RAB®
© 2023 RAB LIGHTING Inc.
Cranbury, New Jersey 08512 USA
HALED Light
Engine-IN-0522

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request

RAB WARRANTY: RAB's warranty is subject to all terms and conditions found at rablighting.com/warranty.