

INSTRUCTIONS

PL Ballast Compatible - Horizontal / Vertical



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

PLC-9-H-8XX-DIR



IMPORTANT

READ CAREFULLY BEFORE INSTALLING LED tube. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB LED tube must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNINGS:

- **Make certain power is OFF before installing or maintaining fixture.**
- **RISK OF FIRE. USE ONLY IN PLACE OF FLUORESCENT LAMPS SPECIFIED ON LABEL.**
- **RISK OF ELECTRIC SHOCK. DO NOT USE WHERE DIRECTLY EXPOSED TO WATER. SUITABLE FOR DAMP LOCATIONS.**
- **This device is not intended for use with emergency exits.**

SAFETY INFORMATION:

For your and others' safety, please read the precaution carefully before installation:

- (1) LED PL lamp for use only with products described and installed in accordance with product specifications. LED PL lamp to be operated with fluorescent electronic ballast.
- (2) Check the lamp before installation, if there is any damage caused during transportation, do not install.
- (3) Do not stare at the light source with bare eyes for a long time, or beam to others' eyes.
- (4) Do not place any objects on the lamp.
- (5) Keep the lamp away from flame or high temperature objects.
- (6) Only replace with same type of LED tube! Risk of electrical shock.



MAINTENANCE NOTES:

- (1) Clean luminaire with dry cloth.
- (2) Do not clean the lamp with corrosive chemicals.
- (3) Maintenance should be carried out by technical personnel only.

This lamp only operates on electronic ballasts. If lamp does not light when the luminaire is energized, remove lamp from luminaire and contact a qualified electrician. This device is NOT intended for use with emergency exit fixtures or emergency exit lights. Lamps must be operated within an ambient fixture temperature of -30°C and 56°C (-22°F and 133°F) to ensure UL compliance.

PRODUCT FEATURES

- UL certified
- Plug-n-Play replacement
- Compatible with electronic instant start, rapid start, and programmed start ballasts.

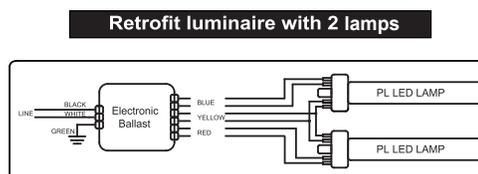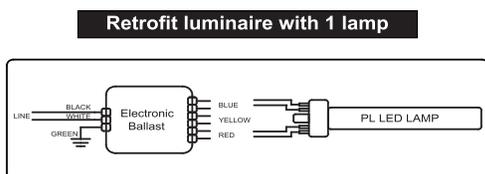

- Product applications: widely used in residential buildings, offices, shopping malls, supermarkets, hospitals, assembly lines, warehouses, etc. for energy-saving illumination.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

INSTRUCTIONS


PL Ballast Compatible - Horizontal / Vertical




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

INSTALLATION INSTRUCTIONS


1. Make Sure Power is OFF.
2. Remove lens or diffuser (if applicable).
3. Remove existing fluorescent lamps from the luminaire.

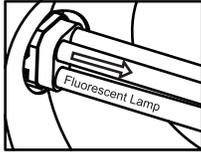

4. Bring LED lamp to luminaire and insert lamp pins into luminaire lamp holders.

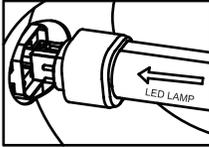

5. Rotate LED lamp until lamp locks in place. Ensure that the LED lamp front points away from the back of the luminaire.
Note: install LED PL replacement lamp one for each fluorescent lamp removed.

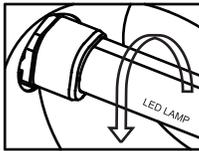

6. Place lens or diffuser back in place (if applicable).
7. Power ON.

DO NOT INSTALL THIS LAMP IN A PRE-HEATED LUMINAIRE.

CAUTION, RISK OF FIRE. IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIREABLE OPERATION (BUZZING, FLICKERING, ETC.), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT RAB.

THIS LAMP ONLY OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE LAMP FROM LUMINAIRE AND CONTACT RAB OR A QUALIFIED ELECTRICIAN.

THIS PRODUCT MAY CAUSE INTERFERENCE TO RADIO EQUIPMENT AND SHOULD NOT BE INSTALLED NEAR MARITIME SAFETY COMMUNICATIONS EQUIPMENT OR OTHER CRITICAL NAVIGATION OR COMMUNICATION EQUIPMENT OPERATING BETWEEN 0.45 - 30 MHZ.

WARRANTY

This product is warranted for 5 years from the date of purchase. If this product does not perform to the specifications supplied on this package, send an email or write to the address below for product return and replacement. This replacement is the sole remedy available. Liability for incidental or consequential damage is expressly excluded.



© 2019 RAB LIGHTING Inc.
Northvale, New Jersey 07647 USA

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request

INSTRUCTIONS

PL Ballast Compatible - Horizontal / Vertical



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

PLC-9-V-8XX-DIR



IMPORTANT

READ CAREFULLY BEFORE INSTALLING LED tube. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB LED tube must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNINGS:

- **Make certain power is OFF before installing or maintaining fixture.**
- **RISK OF FIRE. USE ONLY IN PLACE OF FLUORESCENT LAMPS SPECIFIED ON LABEL.**
- **RISK OF ELECTRIC SHOCK. DO NOT USE WHERE DIRECTLY EXPOSED TO WATER. SUITABLE FOR DAMP LOCATIONS.**
- **This device is not intended for use with emergency exits.**

SAFETY INFORMATION:

For your and others' safety, please read the precaution carefully before installation:

- (1) LED PL lamp for use only with products described and installed in accordance with product specifications. LED PL lamp to be operated with fluorescent electronic ballast.
- (2) Check the lamp before installation, if there is any damage caused during transportation, do not install.
- (3) Do not stare at the light source with bare eyes for a long time, or beam to others' eyes.
- (4) Do not place any objects on the lamp.
- (5) Keep the lamp away from flame or high temperature objects.
- (6) Only replace with same type of LED tube! Risk of electrical shock.

MAINTENANCE NOTES:


- (1) Clean luminaire with dry cloth.
- (2) Do not clean the lamp with corrosive chemicals.
- (3) Maintenance should be carried out by technical personnel only.

This lamp only operates on electronic ballasts. If lamp does not light when the luminaire is energized, remove lamp from luminaire and contact a qualified electrician. This device is NOT intended for use with emergency exit fixtures or emergency exit lights. Lamps must be operated within an ambient fixture temperature of -30°C and 56°C (-22°F and 133°F) to ensure UL compliance.

PRODUCT FEATURES

- UL certified
- Plug-n-Play replacement
- Compatible with electronic instant start, rapid start, and programmed start ballasts.

wire diagram

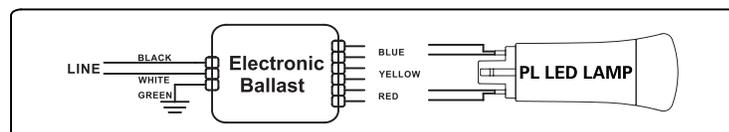

- Product applications: widely used in residential buildings, offices, shopping malls, supermarkets, hospitals, assembly lines, warehouses, etc. for energy-saving illumination.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

INSTRUCTIONS


PL Ballast Compatible - Horizontal / Vertical




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

INSTALLATION INSTRUCTIONS

1. Make Sure Power is OFF.
2. Remove lens or diffuser (if applicable).
3. Remove existing fluorescent lamps from the luminaire.

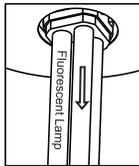

4. Bring LED lamp to luminaire and insert lamp pins into luminaire lamp holders.

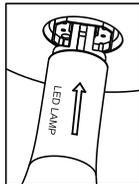

5. Place lens or diffuser back in place (if applicable).
6. Power ON.

DO NOT INSTALL THIS LAMP IN A PRE-HEATED LUMINAIRE.

CAUTION, RISK OF FIRE. IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIREABLE OPERATION (BUZZING, FLICKERING, ETC.), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT RAB.

THIS LAMP ONLY OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE LAMP FROM LUMINAIRE AND CONTACT RAB OR A QUALIFIED ELECTRICIAN.

THIS PRODUCT MAY CAUSE INTERFERENCE TO RADIO EQUIPMENT AND SHOULD NOT BE INSTALLED NEAR MARITIME SAFETY COMMUNICATIONS EQUIPMENT OR OTHER CRITICAL NAVIGATION OR COMMUNICATION EQUIPMENT OPERATING BETWEEN 0.45 - 30 MHZ.

WARRANTY

This product is warranted for 5 years from the date of purchase. If this product does not perform to the specifications supplied on this package, send an email or write to the address below for product return and replacement. This replacement is the sole remedy available. Liability for incidental or consequential damage is expressly excluded.



© 2019 RAB LIGHTING Inc.
Northvale, New Jersey 07647 USA

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request

INSTRUCTIONS

PL Ballast Compatible - Horizontal / Vertical



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

PLT-16-H-8XX-DIR



IMPORTANT

READ CAREFULLY BEFORE INSTALLING LED tube. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB LED tube must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNINGS:

- **Make certain power is OFF before installing or maintaining fixture.**
- **RISK OF FIRE. USE ONLY IN PLACE OF FLUORESCENT LAMPS SPECIFIED ON LABEL.**
- **RISK OF ELECTRIC SHOCK. DO NOT USE WHERE DIRECTLY EXPOSED TO WATER. SUITABLE FOR DAMP LOCATIONS.**
- **This device is not intended for use with emergency exits.**

SAFETY INFORMATION:

For your and others' safety, please read the precaution carefully before installation:

- (1) LED PL lamp for use only with products described and installed in accordance with product specifications. LED PL lamp to be operated with fluorescent electronic ballast.
- (2) Check the lamp before installation, if there is any damage caused during transportation, do not install.
- (3) Do not stare at the light source with bare eyes for a long time, or beam to others' eyes.
- (4) Do not place any objects on the lamp.
- (5) Keep the lamp away from flame or high temperature objects.
- (6) Only replace with same type of LED tube! Risk of electrical shock.



MAINTENANCE NOTES:

- (1) Clean luminaire with dry cloth.
- (2) Do not clean the lamp with corrosive chemicals.
- (3) Maintenance should be carried out by technical personnel only.

This lamp only operates on electronic ballasts. If lamp does not light when the luminaire is energized, remove lamp from luminaire and contact a qualified electrician. This device is NOT intended for use with emergency exit fixtures or emergency exit lights. Lamps must be operated within an ambient fixture temperature of -30°C and 56°C (-22°F and 133°F) to ensure UL compliance.

PRODUCT FEATURES

- UL certified
- Plug-n-Play replacement
- Compatible with electronic instant start, rapid start, and programmed start ballasts.

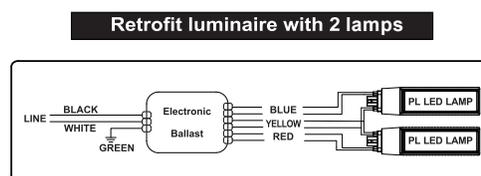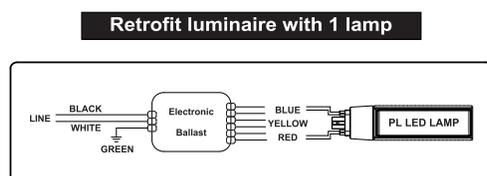

- Product applications: widely used in residential buildings, offices, shopping malls, supermarkets, hospitals, assembly lines, warehouses, etc. for energy-saving illumination.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

INSTRUCTIONS


PL Ballast Compatible - Horizontal / Vertical




RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

INSTALLATION INSTRUCTIONS


1. Make Sure Power is OFF.
2. Remove lens or diffuser (if applicable).
3. Remove existing fluorescent lamps from the luminaire.

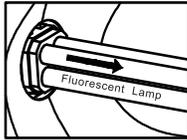

4. Bring LED lamp to luminaire and insert lamp pins into luminaire lamp holders.

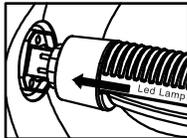

5. Rotate LED lamp until lamp locks in place. Ensure that the LED lamp front points away from the back of the luminaire.
Note: install LED PL replacement lamp one for each fluorescent lamp removed.

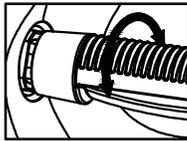

6. Place lens or diffuser back in place (if applicable).
7. Power ON.

WARRANTY

This product is warranted for 5 years from the date of purchase. If this product does not perform to the specifications supplied on this package, send an email or write to the address below for product return and replacement. This replacement is the sole remedy available. Liability for incidental or consequential damage is expressly excluded.

DO NOT INSTALL THIS LAMP IN A PRE-HEATED LUMINAIRE.

CAUTION, RISK OF FIRE. IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIREABLE OPERATION (BUZZING, FLICKERING, ETC.), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT RAB.

THIS LAMP ONLY OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE LAMP FROM LUMINAIRE AND CONTACT RAB OR A QUALIFIED ELECTRICIAN.

THIS PRODUCT MAY CAUSE INTERFERENCE TO RADIO EQUIPMENT AND SHOULD NOT BE INSTALLED NEAR MARITIME SAFETY COMMUNICATIONS EQUIPMENT OR OTHER CRITICAL NAVIGATION OR COMMUNICATION EQUIPMENT OPERATING BETWEEN 0.45 - 30 MHZ.



© 2019 RAB LIGHTING Inc.
Northvale, New Jersey 07647 USA

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request

INSTRUCTIONS

PL Ballast Compatible - Horizontal / Vertical



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

PLT-16-V-8XX-DIR



IMPORTANT

READ CAREFULLY BEFORE INSTALLING LED tube. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB LED tube must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNINGS:

- **Make certain power is OFF before installing or maintaining fixture.**
- **RISK OF FIRE. USE ONLY IN PLACE OF FLUORESCENT LAMPS SPECIFIED ON LABEL.**
- **RISK OF ELECTRIC SHOCK. DO NOT USE WHERE DIRECTLY EXPOSED TO WATER. SUITABLE FOR DAMP LOCATIONS.**
- **This device is not intended for use with emergency exits.**

SAFETY INFORMATION:

For your and others' safety, please read the precaution carefully before installation:

- (1) LED PL lamp for use only with products described and installed in accordance with product specifications. LED PL lamp to be operated with fluorescent electronic ballast.
- (2) Check the lamp before installation, if there is any damage caused during transportation, do not install.
- (3) Do not stare at the light source with bare eyes for a long time, or beam to others' eyes.
- (4) Do not place any objects on the lamp.
- (5) Keep the lamp away from flame or high temperature objects.
- (6) Only replace with same type of LED tube! Risk of electrical shock.

MAINTENANCE NOTES:


- (1) Clean luminaire with dry cloth.
- (2) Do not clean the lamp with corrosive chemicals.
- (3) Maintenance should be carried out by technical personnel only.

This lamp only operates on electronic ballasts. If lamp does not light when the luminaire is energized, remove lamp from luminaire and contact a qualified electrician. This device is NOT intended for use with emergency exit fixtures or emergency exit lights. Lamps must be operated within an ambient fixture temperature of -30°C and 56°C (-22°F and 133°F) to ensure UL compliance.

PRODUCT FEATURES

- UL certified
- Plug-n-Play replacement
- Compatible with electronic instant start, rapid start, and programmed start ballasts.

wire diagram

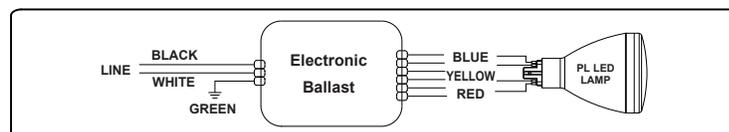

- Product applications: widely used in residential buildings, offices, shopping malls, supermarkets, hospitals, assembly lines, warehouses, etc. for energy-saving illumination.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

INSTRUCTIONS


PL Ballast Compatible - Horizontal / Vertical

RAB®


RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

INSTALLATION INSTRUCTIONS

1. Make Sure Power is OFF.
2. Remove lens or diffuser (if applicable).
3. Remove existing fluorescent lamps from the luminaire.

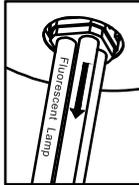

4. Bring LED lamp to luminaire and insert lamp pins into luminaire lamp holders.

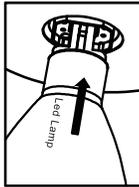

5. Place lens or diffuser back in place (if applicable).
6. Power ON.

DO NOT INSTALL THIS LAMP IN A PRE-HEATED LUMINAIRE.

CAUTION, RISK OF FIRE. IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIREABLE OPERATION (BUZZING, FLICKERING, ETC.), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT RAB.

THIS LAMP ONLY OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE LAMP FROM LUMINAIRE AND CONTACT RAB OR A QUALIFIED ELECTRICIAN.

THIS PRODUCT MAY CAUSE INTERFERENCE TO RADIO EQUIPMENT AND SHOULD NOT BE INSTALLED NEAR MARITIME SAFETY COMMUNICATIONS EQUIPMENT OR OTHER CRITICAL NAVIGATION OR COMMUNICATION EQUIPMENT OPERATING BETWEEN 0.45 - 30 MHZ.

WARRANTY

This product is warranted for 5 years from the date of purchase. If this product does not perform to the specifications supplied on this package, send an email or write to the address below for product return and replacement. This replacement is the sole remedy available. Liability for incidental or consequential damage is expressly excluded.

RAB®
© 2019 RAB LIGHTING Inc.
Northvale, New Jersey 07647 USA

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request

INSTRUCTIONS

Ballast Compatible - Horizontal / Vertical



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

PLL-13.5-8XX-DIR



IMPORTANT

READ CAREFULLY BEFORE INSTALLING LAMPS. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB lamps must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNINGS:

- **Risk of fire or electric shock.** LED Retrofit Kit installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician. Installation should be performed only by a qualified electrician in accordance with the National Electrical Code and relevant local code.
- **Risk of fire or electric shock.** Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

CAUTION

- **RISK OF FIRE.** IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIRABLE OPERATION (BUZZING, FLICKERING, ETC.), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT THE MANUFACTURER.
- Disconnect power at the source before installation, inspection or removal. Do not simply switch off fixture.
- Not intended for use with emergency exit fixtures or emergency exit lights.
- **THIS LAMP ONLY OPERATES ON ELECTRONIC PROGRAMMABLE BALLASTS.** IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE LAMP FROM LUMINAIRE AND CONTACT LAMP MANUFACTURER OR QUALIFIED ELECTRICIAN.
- This lamp is not compatible with all ballasts. Before replacing existing fluorescent lamps, check compatibility of LED lamps and luminaire ballast.
- Do not use if product is damaged.
- This lamp might not be compatible with all dimmers. Please visit rablighting.com for compatibility information.
- **Risk of fire or electric shock.** Do not open or modify. No user serviceable parts inside.
- **SUITABLE FOR DAMP LOCATIONS.** Suitable for use in wet locations when used in an outdoor-rated fixture. Not for use where directly exposed to the weather or water.
- Complies with Part 15 of FCC. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received including interference that may cause undesired operation.
- No external weight or mechanical force should be applied to lamp or components.
- **DO NOT INSTALL THIS LAMP IN A PRE-HEAT LUMINAIRE.**

NOTE:

- This retrofit kit can replace 40W CFL lamps with 2G11 bases.

INSTRUCTIONS




PL Ballast Compatible - Horizontal / Vertical

RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

INSTALLATION

1. Switch-off power to luminaire.
2. Remove the cover lens (if provided).
3. Carefully remove all existing CFL lamps from luminaire. Note: Verify that the ballast is compatible with LED PLL lamps, see the ballast compatibility list.
4. Confirm the lampholder has a 2G11 socket.
5. Insert the LED PLL lamp into the open socket within the fixture. Ensure pins are firmly seated in the lampholder.
6. Switch on power to luminaire and installation is now complete.

WIRING DIAGRAM

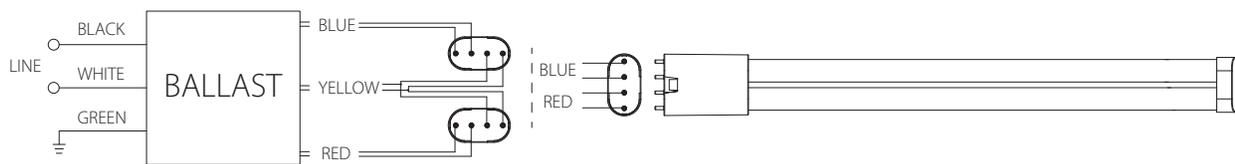

© 2020 RAB LIGHTING Inc.
Northvale, New Jersey 07647 USA

Easy Answers

rablighting.com
Visit our website for product info

Tech Help Line
Call our experts: 888 722-1000

e-mail
Answered promptly - sales@rablighting.com

Free Lighting Layouts
Answered online or by request

PLLDIR-IN-0820

RAB WARRANTY: RAB's warranty is subject to all terms and conditions found at rablighting.com/warranty.